

Operating Instructions

english

Antimag

Demagnetizing equipment



Content

1	General.....	3
2	Important safety warnings	3
3	Product description.....	3
3.1	CE conformity	4
3.2	Description of the unit	4
3.3	Technical details	4
4	Putting into Operations.....	5
5	Demagnetizing	5
6	Upkeep of the Machine	6
7	Putting out of action and waste disposal	7
8	Manufacturer's contact address	7

1

General

The present Operating Instructions are part of the delivered equipment. They must be ready for use at any time and remain with the unit in case of resale.

Reprints, translations and copying of any kind, including of parts of the document, must be authorized by the editor.

The copyright remains with the editor.

These Operating Instructions are not automatically revised. For the latest revised issue please contact the manufacturer and editor of these Operating Instructions.

The manufacturer's address is indicated on the last page of the Operating Instructions.

2



Important safety warnings

To be read before initial operation!

Intended use

The equipment is intended for demagnetizes from clockworks and tools.

Transport damages

Check the unit and mains cable for transport damages. In case of visible damages do not put the unit into operation.

Mains connection



The technical details indicated on the nameplate must correspond with the available mains connection details, in particular those of the mains voltage.

Placement

Place the unit onto a stable surface. Keep the unit dry!

Prevention of electrical accidents



In order to prevent electrical accidents, keep the working surface, the unit and the mains plug dry! Do not put the unit under water!

In case of damages on the Super Elite or the mains cable do not connect the unit to the mains!
The unit must be opened by authorized and specialized personnel only! Unplug the mains cable before opening the unit!

3

Product description


Electronic demagnetizing unit with large support surface for watches and fine mechanical tools. Very easy handling by one-button operation.

3.1 CE conformity

The present Elma device complies with the CE criteria.

The declaration of conformity is available from the manufacturer.

3.2 Description of the unit

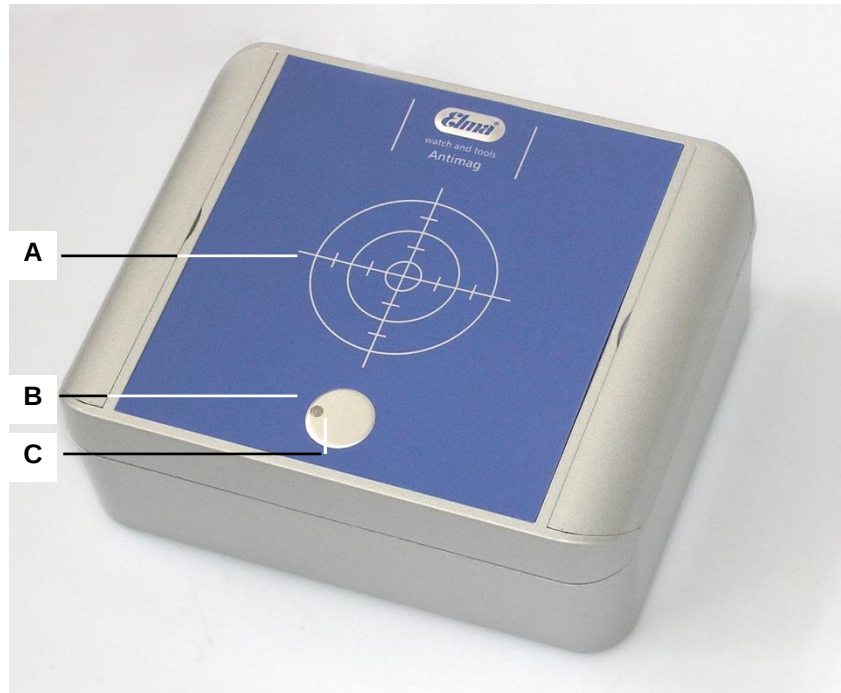

- A** mounting surface for objects to be demagnetized
- B** LED display
- C** operating button

3.3 Technical details

Mains voltage (as per version) (Vac)	100-120 or 240-240
Mains frequency (Hz)	50 / 60
Outer dimensions of unit W / D / H (mm)	160 / 130 / 60
Weight (kg)	1,0
Material of housing	Plastic

4 Putting into Operations

- Preparation** Compare voltage on type-plate with the voltage in your workshop.
Place the unit onto a stable and dry surface

5 Demagnetizing

1. Connect the unit to the mains.
2. Place parts to be demagnetized on mounting surface.
Place small watch parts only in closed plastic bags on mounting surface.
3. Press operating button for approx. 1 second.
The red LED display lights up for a short moment.
The unit demagnetizes now in a fraction of a second the parts to be demagnetized.



ATTENTION: Do not place electrical or electronical watches on the Antimag for demagnetizing as this will affect the function of the watches.



Round objects should be placed in the center of the field, whilst long objects, such as pincers, pliers, etc. should be laid in the center of the rectangle parallel to its longest sides. Objects which are longer than the operating area must be demagnetized in sections. The demagnetizing power of the instrument is limited to only the maximum permissible weight and thickness of the object. The weight must not exceed 250 grams, and pliers etc. must not be thicker than 10 mm

Very small objects with a diameter smaller than 0,5 mm, particularly when the lengths are much greater than the thickness, e. g. needles, give a force flow which is too small when demagnetized individually. Either several such pieces should be demagnetized together or held individually in pincers. This way these pieces can be completely demagnetized. It is advisable to hold the objects firmly in the field as (especially in the case of small pieces) they tend to be pushed away by the impact of the magnet force, the magnetic object can also turn out of the alternating field, if this happens the demagnetization cannot be completed.

The best way of testing whether the tools have been completely demagnetized is to use small washers which must be previously demagnetized.

Testing by means of a magnetic needle or compass, as is tried sometimes, gives erroneous results because these can also be deflected by non-magnetic iron. Magnets or magnetic steels cannot be demagnetized with this instrument.

6

Upkeep of the Machine

The equipment is generally maintenance-free!

Mains cable and mains connection

For your own safety, we recommend that you check the mains cable and the mains connection jack at the unit for damage at regular intervals.

Repair

In case of technical faults please contact your supplier or the manufacturer of the unit.
Please give/state the motor serial number when contacting your supplies.

Opening by authorized specialized personnel only



DANGER

Repair and maintenance work which require the unit to be connected and opened must be carried out by authorized and specialized personnel only.

Separate the unit from the mains before opening up the housing. The manufacturer cannot be held responsible for any damage caused by unauthorized repair works.

In case of damage please contact the manufacturer or your supplier.

7

Putting out of action and waste disposal



The unit can be taken to plastics and electronics recycling stations or returned to the manufacturer.

8

Manufacturer's contact address

Elma Schmidbauer GmbH

Gottlieb-Daimler-Str. 17
78224 Singen (Germany)
www.elma-ultrasonic.com

Technical Support

Tel: +49 (0) 77 31 / 882-280

E-Mail: support@elma-ultrasonic.com

Copyright © 2020 Elma Schmidbauer GmbH.
All rights reserved.

Subject to technical and visual modifications.